



Table of Contents

	Preface	xv
	Purpose of This Document	xv
	Intended Audience	xv
	Document Organization	xv
	Conventions	xvi
	Related Information	xvi
Chapter 1	TALnet Product Overview	1-1
	1.1 TALtalk Protocol	1-1
	1.2 Standard Network Protocols	1-2
	1.3 Standard Application Support	1-2
	1.4 TALnet Configuration Overview	1-2
Chapter 2	Planning Your Router Configuration	2-1
	2.1 Determining Network Parameters	2-1
	2.1.1 Global Parameters	2-1
	Hostname	2-1
	SNMP Variables	2-2
	2.1.2 Radio Parameters	2-2
	2.1.3 Ethernet Interface Parameters	2-5
	IP Address Overview	2-5
	Subnetting Overview	2-6
	Determining Your Address Scheme	2-7
	2.1.4 Domain Name System (DNS)	2-8
	2.1.5 Routing Information	2-10
	Static and Dynamic Routing	2-10
	Routing Information Protocol (RIP)	2-10
	Additional Routing Parameters	2-11
	2.1.6 User Authorization	2-12
	2.2 Configuration Worksheet	2-12

Chapter 3	Configuring the TALnet Software	3-1
3.1	Sample Configuration File	3-1
3.2	Configuration Overview	3-5
3.3	Logging On to the System When User Authorization is Set	3-5
3.4	Opening the Configuration File	3-6
3.4.1	Opening the File from the Console	3-7
3.4.2	Opening the File from a Remote System	3-8
3.5	Specifying Global Parameters	3-9
3.5.1	Defining a Hostname	3-9
3.5.2	Identifying the System Contact	3-9
3.5.3	Identifying the System Location	3-9
3.6	Configuring Radio Parameters	3-10
3.6.1	Configuring the Wireless Interface	3-10
3.6.2	Configuring the Channel	3-11
3.6.3	Defining the IP Address	3-11
3.6.4	Modifying the Power on a Per-Link Basis	3-12
3.6.5	Radio Configuration Examples	3-12
3.7	Configuring Your Ethernet Connection	3-13
3.7.1	Configuring the Device	3-13
3.7.2	Configuring the Interface	3-13
3.7.3	Assigning Multiple IP Addresses	3-14
3.7.4	Ethernet Configuration Examples	3-14
	Ethernet Interface with One IP Address	3-15
	Ethernet Interface with Two IP Addresses	3-15
3.8	Defining the Location of the DNS Server	3-15
3.9	Setting Up Routing	3-16
3.9.1	Creating a Static Routing Table	3-17
3.9.2	Adding a Default Route to a Routing Table	3-17
3.9.3	Identifying Associated Networks	3-17
3.9.4	Enabling Automatic Neighbor Updates	3-18
3.9.5	Enabling Wireless Neighbor Security	3-18
	Neighbor Address Identification	3-19
	Key Authentication	3-21
3.9.6	Enabling or Disabling RIP	3-22
3.10	Defining User Authorization	3-22
3.11	Establishing IP Packet Filters	3-24
3.11.1	Filtering Packets Based on Packet Type	3-24
3.11.2	Filtering Packets Based on Source or Destination Addresses	3-25
3.11.3	Packet-Filtering Examples	3-25
3.12	Modifying the ARP Cache	3-26
3.13	Configuring Support for PPP Connections	3-27
3.13.1	Overview of PPP	3-27
3.13.2	Configuring Support for Remote PPP Connections	3-28
3.13.3	Configuring Support for Direct PPP Connections	3-30
3.13.4	PPP Configuration Example	3-32

- 3.14 Reloading the Configuration File 3-32
 - 3.14.1 Reloading the File from the Console 3-32
 - 3.14.2 Reloading the File from a Remote System 3-33

Chapter 4 Monitoring and Maintaining Your Network 4-1

- 4.1 TALnet Monitoring Commands 4-1
 - 4.1.1 Displaying Statistics 4-2
 - 4.1.2 Checking the Log 4-4
 - 4.1.3 Testing Connectivity of a System 4-4
 - 4.1.4 Testing the Route a Datagram Travels 4-5
 - 4.1.5 Analyzing the RSS of Neighboring Routers 4-5
 - 4.1.6 Analyzing the Quality of the Link between Two Routers 4-7
 - Analyzing Link Quality for UDP Traffic 4-7
 - Analyzing Link Quality for TCP Traffic 4-9
 - 4.1.7 Viewing Information on Radio Link Quality 4-10
- 4.2 SNMP 4-11
 - 4.2.1 Overview of SNMP 4-11
 - 4.2.2 Supported MIBs 4-12
 - 4.2.3 Configuring Your Router to Support SNMP 4-12
 - 4.2.4 Sending SNMP Requests 4-13

Appendix A TALnet Command Reference A-1

- A.1 ABORT A-2
- A.2 ARP A-4
- A.3 CD A-7
- A.4 CLOSE A-9
- A.5 COPY A-10
- A.6 DELETE A-12
- A.7 DEVICE A-13
- A.8 DIR A-21
- A.9 DOMAIN A-22
- A.10 ECHO A-27
- A.11 EXIT A-28
- A.12 FTP A-29
- A.13 HELP A-37
- A.14 HOP A-38
- A.15 HOSTNAME A-41
- A.16 ICMP A-43
- A.17 IFACE A-45
- A.18 IP A-52
- A.19 KEY A-56

A.20	KICK	A-58
A.21	LOADGEN	A-60
A.22	LOG	A-61
A.23	LOGOUT	A-63
A.24	MEMORY	A-65
A.25	MKDIR	A-67
A.26	PING	A-68
A.27	PROCESS	A-71
A.28	PWD	A-74
A.29	REBOOT	A-75
A.30	RENAME	A-77
A.31	REPEAT	A-79
A.32	RESET	A-80
A.33	RIP	A-82
A.34	RMDIR	A-86
A.35	ROUTE	A-88
A.36	SESSION	A-90
A.37	SNMP	A-92
A.38	START	A-95
A.39	STOP	A-97
A.40	TALK DEBUG	A-99
A.41	TALK RADIO	A-101
A.42	TALK SHOW	A-111
A.43	TALK TUNE	A-115
A.44	TCP	A-116
A.45	TELNET	A-121
A.46	TIME	A-122
A.47	TIP	A-123
A.48	TRACE	A-125
A.49	UDP	A-128
A.50	UPTIME	A-130
A.51	USER	A-131
A.52	VERSION	A-134
A.53	VIEW	A-135
A.54	WHO	A-136

Appendix B TAL Proprietary Management Information Base (MIB) B-1

- B.1 General Definitions B-1
- B.2 TAL Products B-2
- B.3 TAL Local Variables B-2
- B.4 TALtalk Radio Table B-3
- B.5 TALtalk Neighbor Table B-5
- B.6 TALtalk Channel Table B-9

Appendix C Using Xvi C-1

- C.1 Introduction to Xvi C-1
- C.2 Opening a File C-2
- C.3 Notes about Command Mode C-2
- C.4 Moving the Cursor C-2
- C.5 Modifying the File C-3
- C.6 Saving and Exiting the File C-3

Appendix D Glossary D-1

Index

